

 


PARTS

A 1pc



B 1pc




C 2pcs



D 4pcs



 
E 2pcs




F 2pcs



 G 2pcs




H 2pcs

 

J 1pc



 
K 1pc




L 4pcs



 
M 4pcs



N 4pcs

 


P 2pcs

 

Q 8pcs



 R 1pc



S 1pc



①



43pcs+1pc

②







4pcs+1pc


③



4pcs+1pc


M6

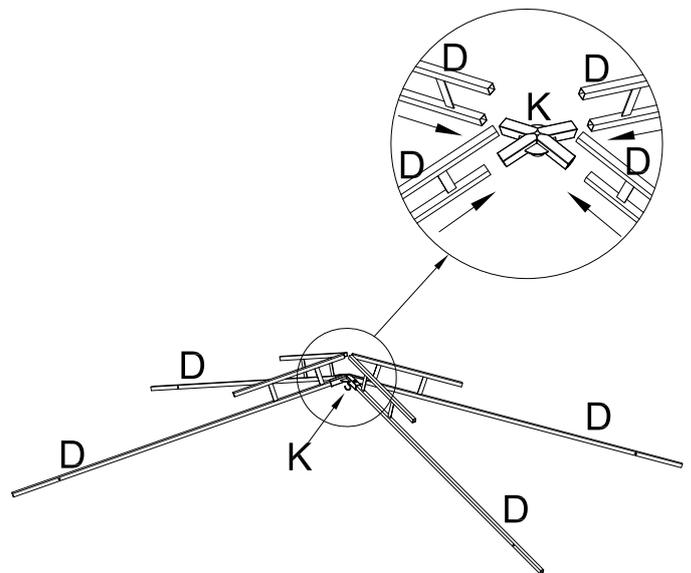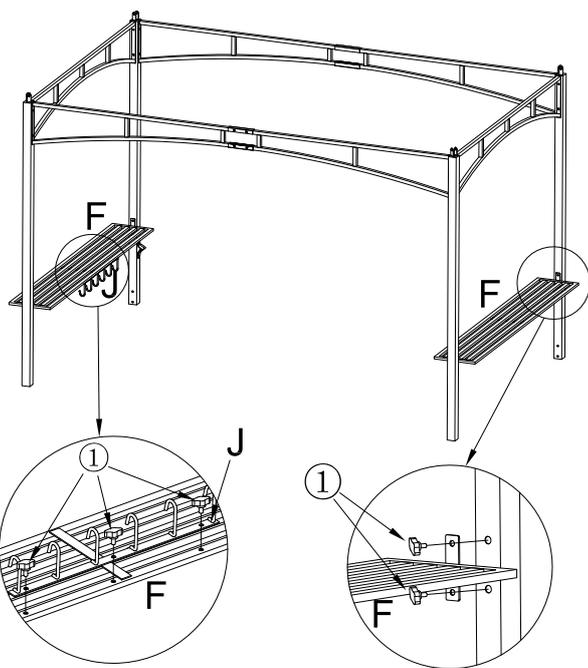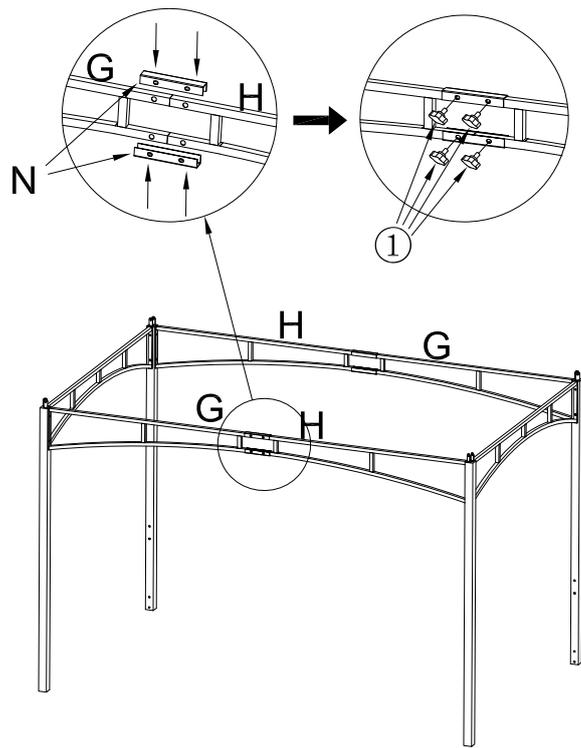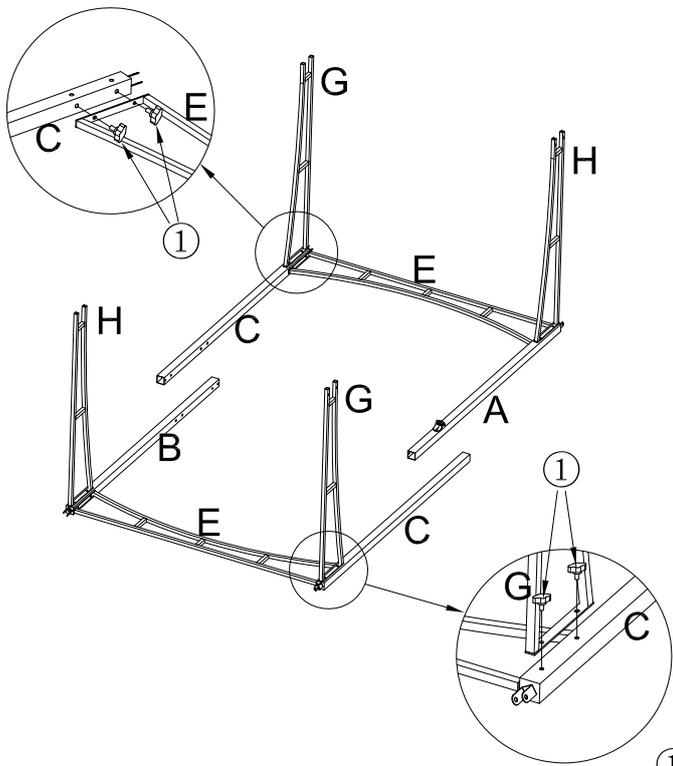

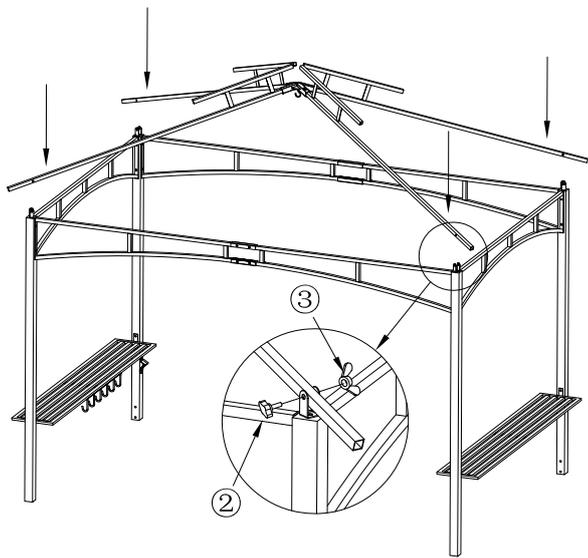


⑤

Press the button and push the extension tube (M) up to the end

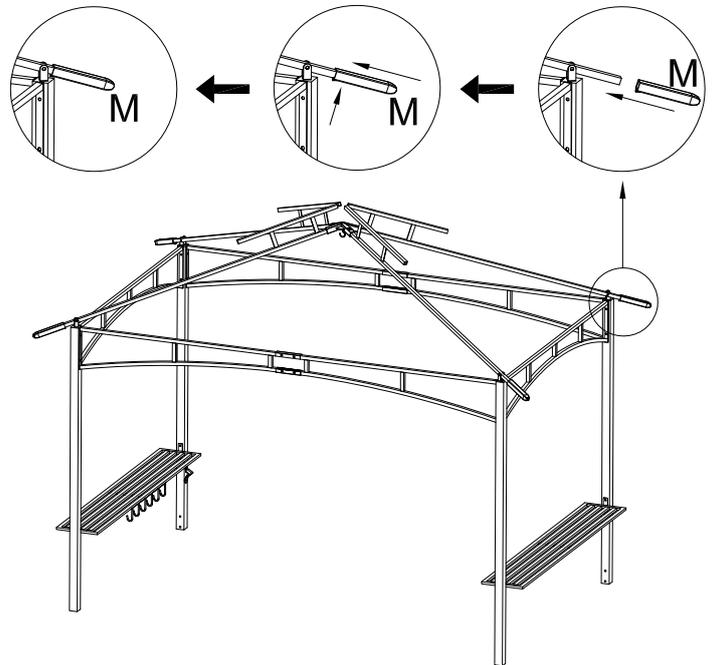


⑥


Pull out the extension tube (M) outwards to adjust the ceiling (R)

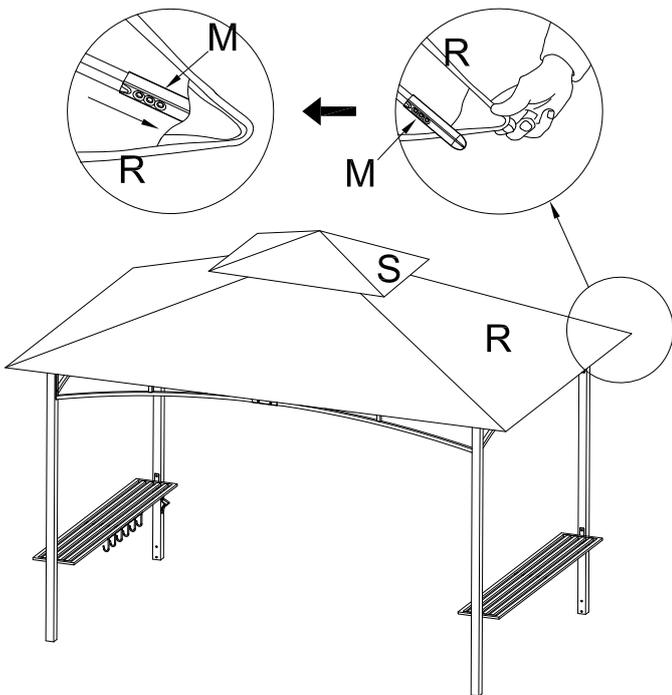

⑦


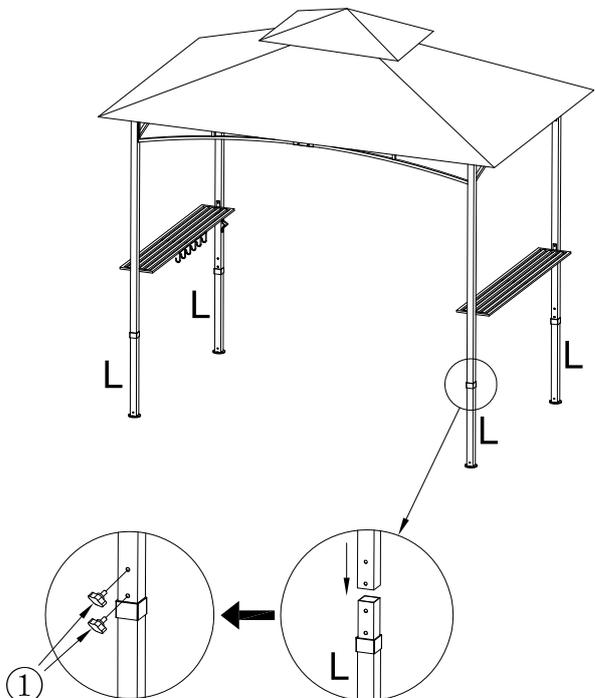


⑧

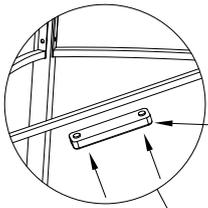

LED ceiling lamp needs three AAA batteries

P

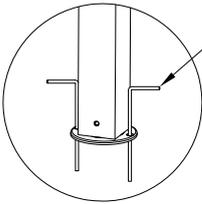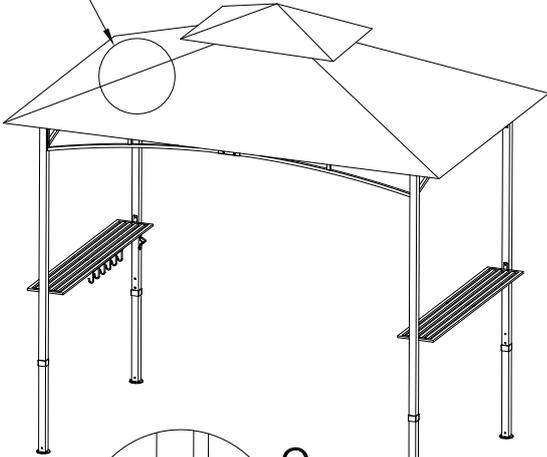

Q

9