






# ASSEMBLY AND CARE INSTRUCTION Dog Crate

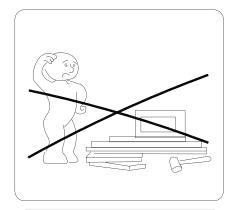


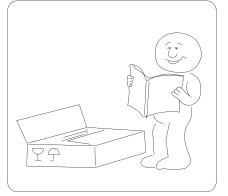


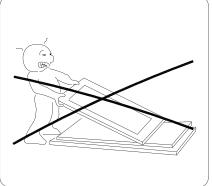


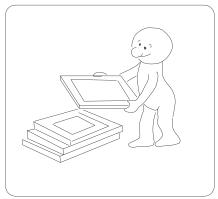

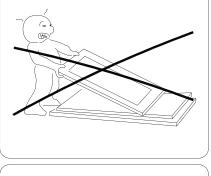

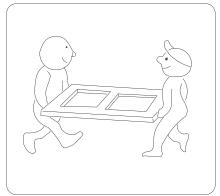

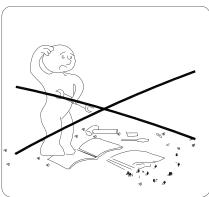

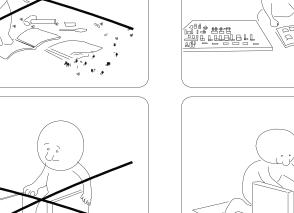





## **WARNING**




- 1. PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING ASSEMBLY.
- 2. DO NOT LET ANY SHARP OBJECTS TOUCH OR RUB THE SURFACE OF THE PRODUCT.
- 3. WHEN ASSEMBLING, DO NOT LET CHILDREN PLAY AROUND THE WORKING AREA.
- 4. PLEASE CONFIRM ALL PARTS ARE **CORRECT BEFORE STARTING** THE ASSEMBLY PROCESS.
- 5. DO NOT TIGHTEN ALL BOLTS AND SCREWS COMPLETELY UNTIL THE ENTIRE UNIT HAS BEEN ASSEMBLED AND SET UP.


### **ADVISE**


- 1. DO NOT SIT OR STAND ON THIS PRODUCT. IT IS INTENDED FOR PETS ONLY.
- 2. THIS PRODUCT SHOULD BE ASSEMBLED BY AN ADULT.
- 3. PLEASE PUT THE PRODUCT ON A SMOOTH SURFACE AFTER YOU ASSEMBLED IT.
- 4. PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- 5. THE SCREW OF HINGE ON THE DOOR ALSO CAN BE ADJUSTABLE, TO MAKE IT EVEN THEN TIGHTEN ALL SCREWS.






SCREWDRIVER REQUIRED - NOT INCLUDED

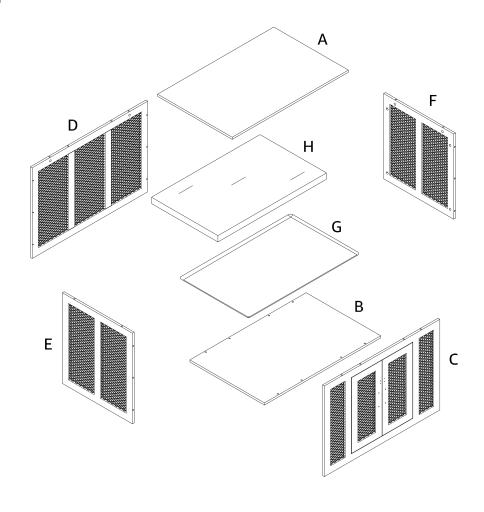

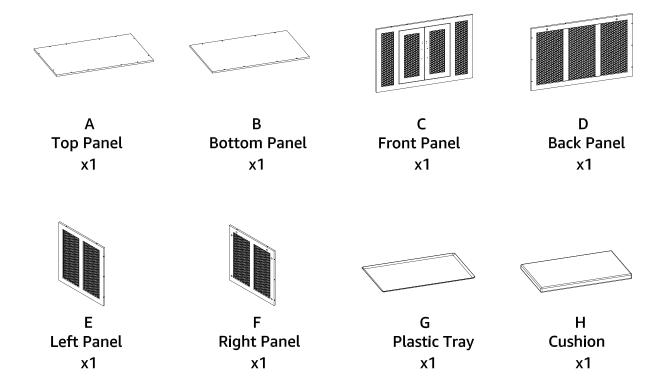


# **HARDWARE**

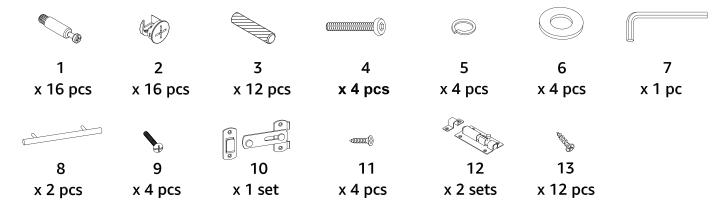

# ASSEMBLY INSTRUCTIONS


Install the latch 12 to the front panel C and tighten them with screw 13. Tighten pin 1 and insert wooden dowel 3 into the top panel A, front panel C and back panel D.

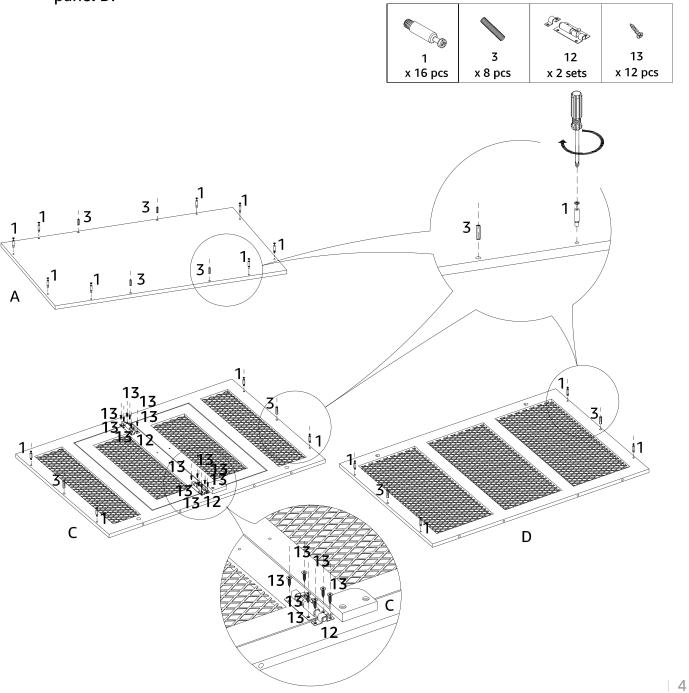



2

Connect left panel E with back panel D, insert cam lock 2 into the hole of left panel E, tighten cam lock 2 to pin 1.

Connect right panel F with back panel D, insert cam lock 2 into the hole of right panel F, tighten cam lock 2 to pin 1.




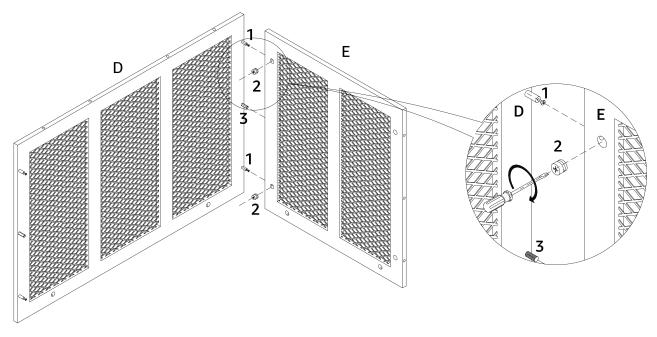

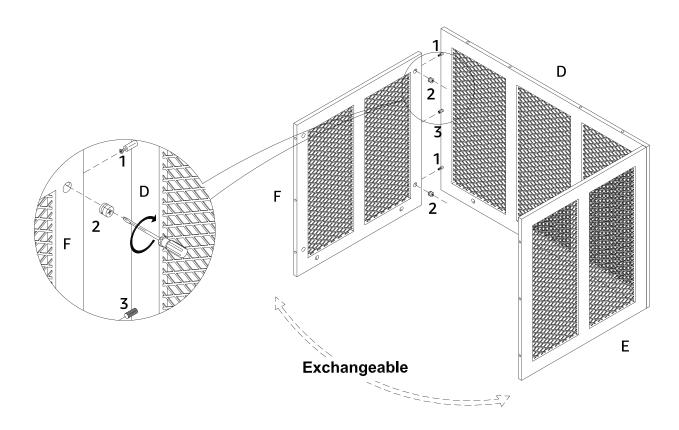

Connect front panel C with left panel E and right panel F, insert cam lock 2 into the hole of left panel E and right panel F, tighten cam lock 2 to pin 1.

Input the body frame into the top panel A, insert cam lock 2 into the hole of the body frame, tighten cam lock 2 to pin 1.

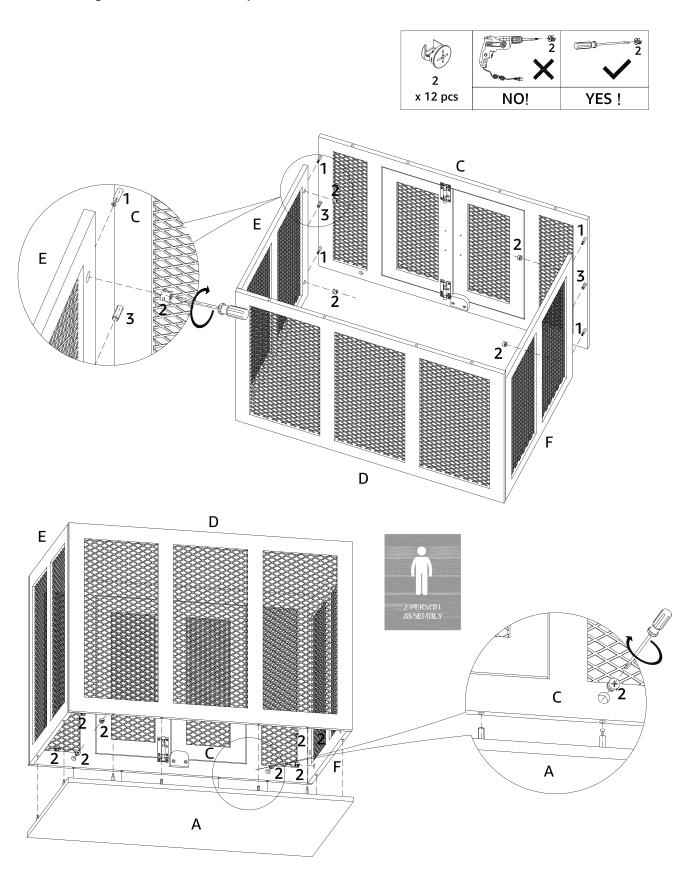


4


Insert wooden dowel 3 into front panel C and back panel D.


Input bottom panel B to the body frame, tighten bolt 4 with washer 5 and 6 into the hole of bottom panel B by Allen Wrench 7.

Turn upside down, tighten the handle 8 to the door on front panel C with screw 9.

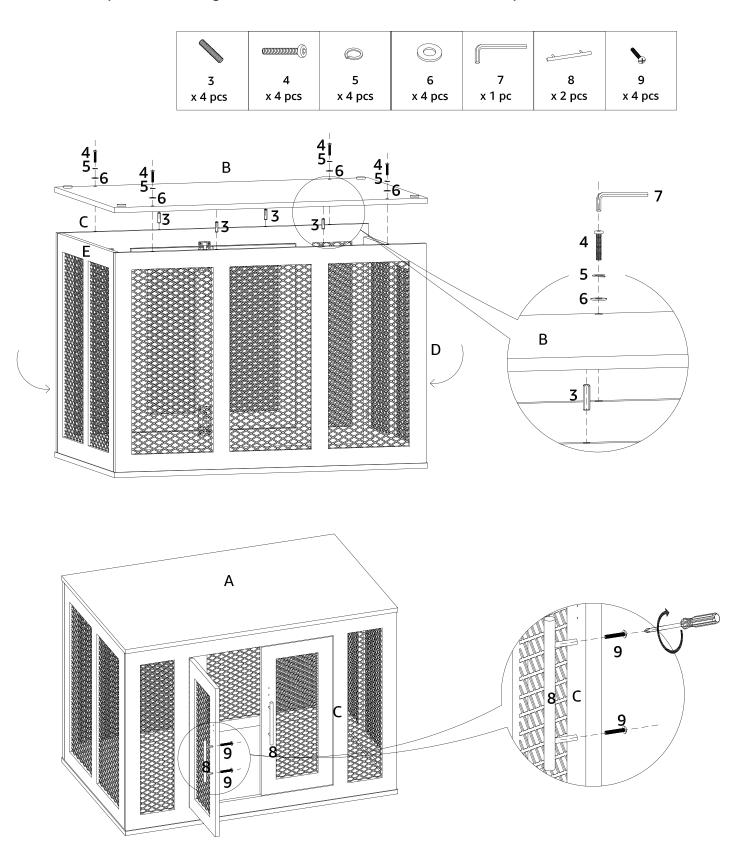

Install the locker 10 to the door on front panel C with screw 11.
Insert plastic tray G to right panel F.

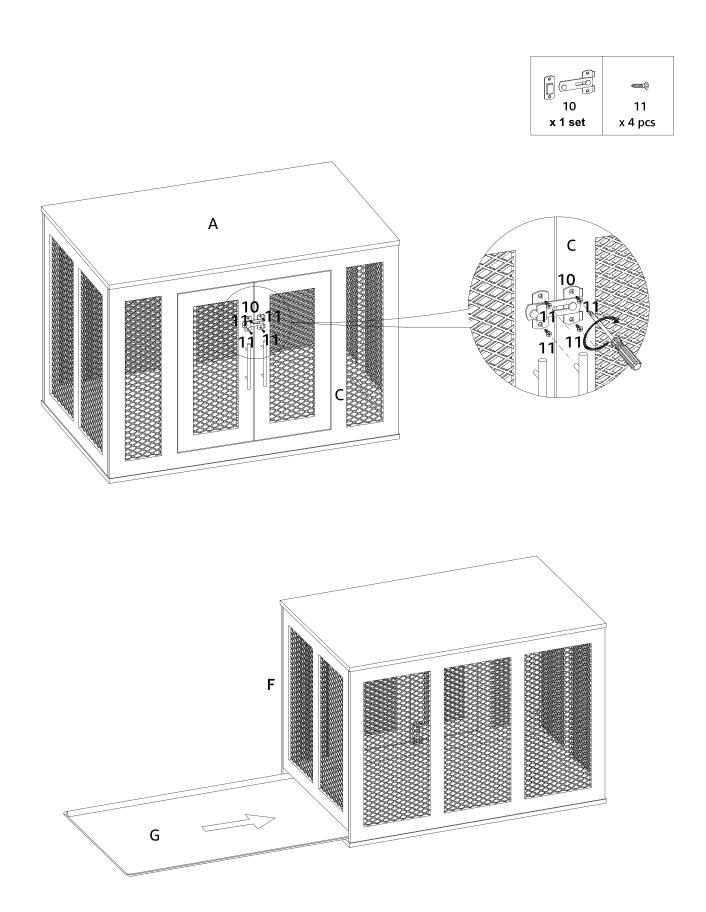

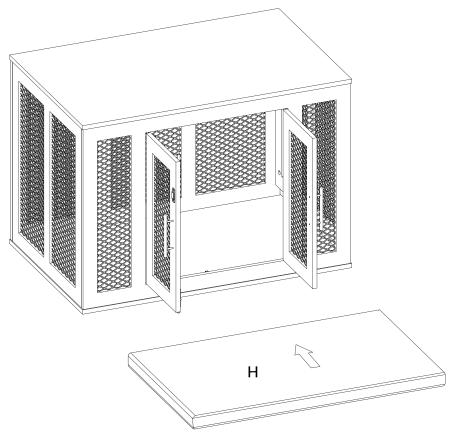

Warning: Please lock the latch 12 when you close the door.

